

ArcticChill 98CLKLARAN

Direct Chill Cooler Plus Contactless Dispensing To Avoid Hand To Tap Contamination & KLARAN UVC **LED Water Purification System**

- Chiller capacity: 30 40 ltrs of below 12 °C chilled water/hour
- Copious amounts of ambient water
- Can be fitted with drip tray overflow kits & mains drainage
- Fits our standard cowling and wall bracket
- FloodGuard inlet solenoid protects the cooler against large scale flooding
- Impressive 23cm dispensing height
- Fitted with contactless dispensing
- Fitted with KLARAN UVC LED water purification system

Contactless Dispensing

An infra red sensor activates dispensing when you place your hand approximately 4cm over the sensor



Place Your Hand Over The Sensor <4cm

23cm Dispensing **Height To Fill Bottles**

How The KLARAN UVC LED Shield Works

- The KLARAN UVC LED purification system destroys bacteria and viruses through UVC LED radiation as the water passes through the KLARAN Shield on its way from the water tank to the tap
- It destroys 99.99% of Cryptosporidium, E Coli, Giardia, Pseudonymous, Legionella and other bacteria
- Research at Boston University confirms that the KLARAN Shield also kills the Covid 19 virus
- This represents a real breakthrough in water cooler hygiene by purifying the water 24/7
- Outstanding reliability. In 5+ years continuous testing the UVC LED radiation has remained
- An added advantage is that the KLARAN Shield, once installed, virtually requires no main-
- The KLARAN Shield can be factory installed into any AA First direct chill cooler, or can be purchased as an accessory for self-installation into your direct chill cooler park







ArcticChill 98CLKLARAN

Direct Chill Cooler Plus Contactless Dispensing To Avoid Hand To Tap Contamination & KLARAN UVC **LED Water Purification System**

Key Feature

First select ambient or cold, then hold the dispensing button down

> ArcticChill 98CL Infra Red Sensor **Enables Contactless Dispensing**

- Green power LED indicates power
- Orange LED will light up during dispensing
- For contactless dispensing place your hand approx. 4cm over the ambient or chilled sensor on top of the cooler



(Infra Red Sensors)

Accessories For The ArcticChill 98



FloodGuard - closed inlet solenoid only opens to allow water into the cooler, when water is dispensed. By remaining closed all other times it protects the cooler against leaks





Mains drainage - connect the drip tray to mains drainage. Can be supplied with a pump, to pump the water over 50m & a rise of 5m



Cowling to fix the cooler securely to the wall. (Supplied separately)



10 litre overflow system with alarm to signal when full. (Factory fitted)



3 Litre overflow kit connects the drip tray to a 3 litre alarmed overflow container. The container has a tap to empty without removing it



A pumped main drainage system pumps the waste water from the drip tray over a distance of 100m & a rise of 5m (Factory installed)



The KLARAN UVC LED shield can be purchased as an accessory for self-installation into your direct chill cooler park.



Weight (Kg) **POU Floor** 30-40 Below 1135 x 340 x Indefinate 25 Standing Ltrs/Hr 12C 340

